

# Getting Started for iXpand™ Memory Case

## NOTE

A complete user manual is available online at:  
[http://kb.sandisk.com/app/answers/detail/a\\_id/18566](http://kb.sandisk.com/app/answers/detail/a_id/18566)

Congratulations on your purchase of the iXpand Memory Case. Below are some quick steps to make your first experience great with the iXpand Case App and the iXpand Memory Case.

1

## How to automatically backup your camera roll – easy to view all your photos and videos from anywhere

Go to menu, and then select Camera Backup. You can select to do an Automatic Backup anytime new photos are added, whether or not to delete photos from the iPhone after they have been backed up, and the destination on the iXpand Memory Case to Backup photos to.



Back Up Now

After the Backup is complete, an option pops up to delete the copied photos from the camera roll of the iPhone. Deleted photos can still be recovered within 40 days using the iPhone Photos app provided by Apple.

## NOTE


Backing up may take longer than normal the 1<sup>st</sup> time. Once set up, only newly added files will be copied to the iXpand Memory Case.

## 2

### How to see your content on the iXpand Memory Case

A summary of all the contents stored on the Memory Case, sorted by Photos, Videos, Music and Other files will be displayed.

You can slide left or right to see the latest images or click on the icon to see the entire content category. Please note that the app does not import your iTunes purchased movies and TV shows as this content is DRM protected by Apple.

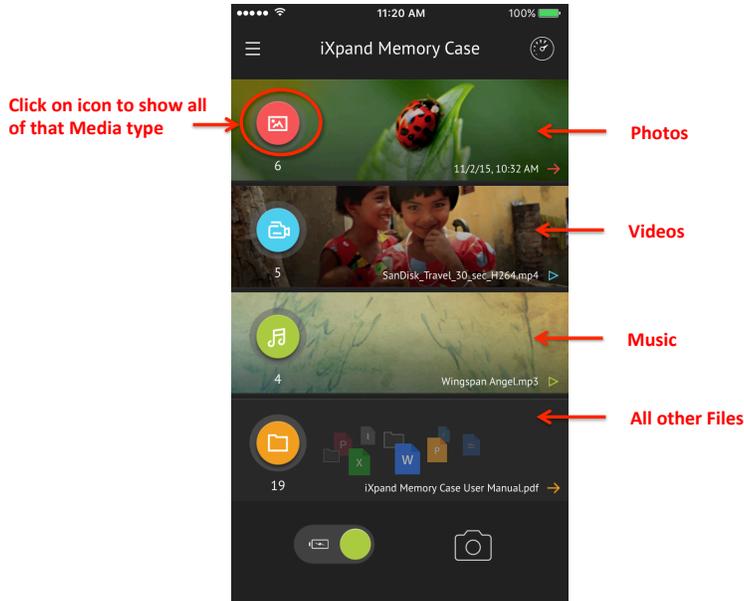

## 3


### How to play all your Music from your Memory Case and iTunes

The Music section will combine Music that resides on your Memory Case and within your iTunes Library. Enjoy all your Music in one central location.

You can tell where the Music file resides by the iTunes icon next to the file.  If the music file has this denotation, then it is located in your iTunes library. Please note your iTunes music that is stored in the cloud (iTunes Match) will not appear in the app and the songs will have to be downloaded to your iPhone for it to be shown in the Case app.

The contents of the iXpand Memory Case will appear on the home screen. You can select the Music icon from the home screen to go into the Music interface. Selecting the currently displayed song track will play that song only.

You can choose different sorting options – By Song, By Artist, By Album, By Playlist, or By Genre.

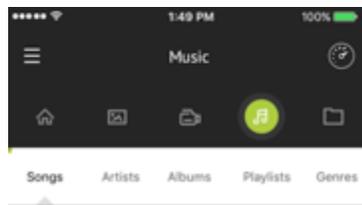

Tap the song you want to play. You can play the other songs in the same folder by swiping left or right.

*Supported Music formats:* MP3, AIF, WAV, AIFF, M4A, WMA, AAC, OGG, FLAC

#### NOTE

Playback supports music purchased from iTunes. Please remember that iTunes is for legal or rightholder-authorized copying only. Some other DRM-protected content is not supported. Check with the content provider for playback


# 4

## How to create playlists from your favorite songs

Open the app and click on the music icon on the home screen. You will be taken to a music interface to allow you manage and play your music

Select the Playlist item from the Music Menu.  
The list of playlists will appear.

To Create a playlist, Select the “New Playlist” button

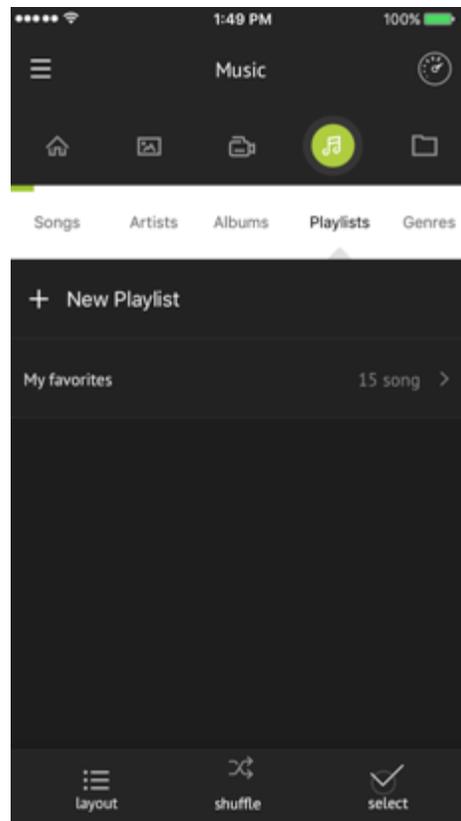

### Name your Playlist.

Add songs to the playlist by touching the name of the song.  
Once you have selected your songs, touch the “create playlist” bar.




You can now play your favorite playlists anytime by accessing them from the Music screen. Select the playlist, then select play.

**NOTE**

The iXpand Battery Pack is sold separately as an optional accessory. The following instructions assumes that you have purchased this through your retailer

To Access the dashboard, select the Menu, then select Dashboard  or click on the icon in the top right corner in the app home screen. The Dashboard will display remaining power on the battery pack and iPhone. The Dashboard will display Available Storage remaining on the Memory Case and iPhone. If you have the optional battery pack installed you can turn on/off charging from this screen or the home screen

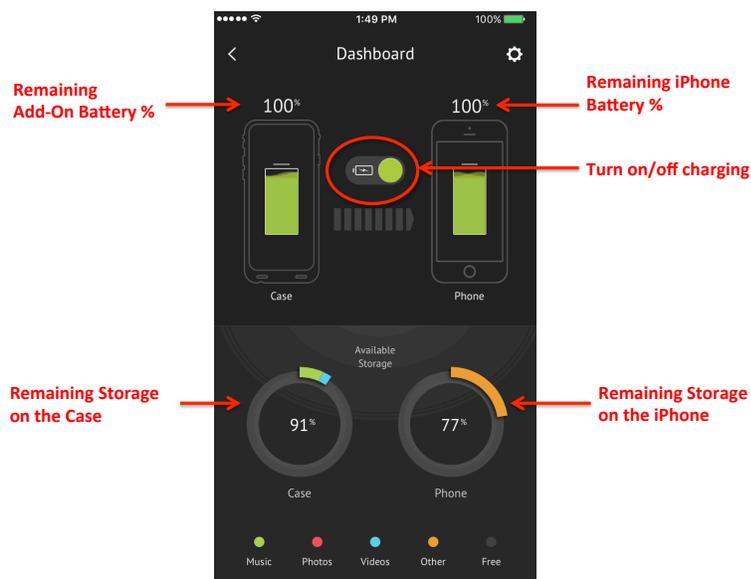**Setting Battery Charge levels**

When the optional Battery pack is connected, you can easily set the start and stop levels for charging through the iXpand Case App.

There are three modes the battery can operate in:

**Always ON** (on the home screen, or the battery dashboard, set the battery toggle to ON)

Battery will charge the phone all the time when connected

**Always OFF** (on the home screen, or the battery dashboard, set the battery toggle to OFF)

Battery will not charge the phone. Note that when you plug the unit into a wall adapter, it will always charge even if this setting is set to off.

**Smart Charging** (Set the Smart Charging toggle to ON in the battery settings)

The defaults for smart charge are targeted to optimize your phone battery, as follows:

Charging will start when the iPhone battery drops to 20% charge.

Charging will stop when the iPhone battery reaches 90% charge.

Charging will stop if the case battery drops to 10% charge.

# 6

## How to play a Video

Open the app and click on the Video icon on the home screen. You can scroll through icons on the home screen, or go directly to the video interface. With the ability to play all your Video files<sup>1</sup>, the iXpand Memory Case is your perfect travel companion.

**NOTE** Purchased iTunes Videos will not playback to due to DRM restrictions.

### NOTE

SanDisk continuously improves our user experience with bug fixes and enhancements. The SanDisk iXpand Case app may notify you that a new firmware is available. The app will also provide any instructions to update firmware. It is always recommended to update to the latest firmware version.

<sup>1</sup> Support for .WMV, .AVI, .MKV, .MP4, .MOV video formats. Some DRM-protected content cannot be streamed. Check with the content provider for playback restrictions.

Western Digital Technologies, Inc.  
951 SanDisk Drive, Milpitas, CA 95035

**Western Digital Technologies, Inc. is the seller of record and licensee in the Americas of SanDisk® products.**

**SanDisk®**  
a Western Digital brand

SanDisk is a trademark of Western Digital Corporation or its affiliates, registered in the United States and other countries. SanDisk iXpand is a trademark of Western Digital Corporation or its affiliates. iPhone and iTunes are registered trademarks of Apple Inc.  
© 2016 Western Digital Corporation. All rights reserved.