 


**2021/6/3 更新**



|                                     |               |   |      |      |              |   |      |      |      |       |                  |   |      |      |       |       |                     |   |      |      |       |       |       |     |   |   |
|-------------------------------------|---------------|---|------|------|--------------|---|------|------|------|-------|------------------|---|------|------|-------|-------|---------------------|---|------|------|-------|-------|-------|-----|---|---|
| 製品型番<br>(型番情報は本資料の最終頁で<br>ご確認ください。) | スタンダード        |   | 16GB | 32GB | ウルトラ (高速タイプ) |   | 16GB | 32GB | 64GB | 128GB | エクストリーム (超高速タイプ) |   | 32GB | 64GB | 128GB | 256GB | エクストリーム プロ (超高速タイプ) |   | 32GB | 64GB | 128GB | 256GB | 512GB | 1TB |   |   |
|                                     | ニコン           |   |      |      |              |   |      |      |      |       |                  |   |      |      |       |       |                     |   |      |      |       |       |       |     |   |   |
|                                     | デジタル カメラ      |   |      |      |              |   |      |      |      |       |                  |   |      |      |       |       |                     |   |      |      |       |       |       |     |   |   |
|                                     | COOLPIX A10   |   | ○    | ○    |              |   | ○    | ○    | ○    | ○     |                  |   | ○    | ○    | ○     | ○     |                     |   | ○    | ○    | ○     | ○     | ○     | ○   | - |   |
|                                     | COOLPIX A100  |   | ○    | ○    |              |   | ○    | ○    | ○    | ○     |                  |   | ○    | ○    | ○     | ○     |                     |   | ○    | ○    | ○     | ○     | ○     | ○   | ○ | - |
|                                     | COOLPIX A300  |   | ○    | ○    |              |   | ○    | ○    | ○    | ○     |                  |   | ○    | ○    | ○     | ○     |                     |   | ○    | ○    | ○     | ○     | ○     | ○   | ○ | - |
|                                     | COOLPIX A900  |   | ○    | ○    |              |   | ○    | ○    | ○    | ○     |                  |   | ○    | ○    | ○     | ○     |                     |   | ○    | ○    | ○     | ○     | ○     | ○   | ○ | - |
|                                     | COOLPIX A1000 |   | ○    | ○    |              |   | ○    | ○    | -    | -     |                  |   | -    | -    | -     | -     |                     |   | -    | -    | -     | -     | -     | -   | - | - |
|                                     | COOLPIX AW120 |   | ○    | ○    |              |   | ○    | ○    | ○    | ○     |                  |   | ○    | ○    | ○     | ○     |                     |   | ○    | ○    | ○     | ○     | ○     | ○   | ○ | - |
|                                     | COOLPIX AW130 |   | ○    | ○    |              |   | ○    | ○    | ○    | ○     |                  |   | ○    | ○    | ○     | ○     |                     |   | ○    | ○    | ○     | ○     | ○     | ○   | ○ | - |
| COOLPIX B500                        |               | ○ | ○    |      |              | ○ | ○    | ○    | ○    |       |                  | ○ | ○    | ○    | ○     |       |                     | ○ | ○    | ○    | ○     | ○     | ○     | ○   | - |   |
| COOLPIX B600                        |               | ○ | ○    |      |              | ○ | ○    | ○    | ○    |       |                  | ○ | ○    | ○    | ○     |       |                     | ○ | ○    | ○    | ○     | ○     | ○     | ○   | - |   |
| COOLPIX B700                        |               | ○ | ○    |      |              | ○ | ○    | ○    | ○    |       |                  | ○ | ○    | ○    | ○     |       |                     | ○ | ○    | ○    | ○     | ○     | ○     | ○   | - |   |
| COOLPIX L30                         |               | ○ | ○    |      |              | ○ | ○    | ○    | ○    |       |                  | ○ | ○    | ○    | ○     |       |                     | ○ | ○    | ○    | ○     | ○     | ○     | ○   | - |   |
| COOLPIX L32                         |               | ○ | ○    |      |              | ○ | ○    | ○    | ○    |       |                  | ○ | ○    | ○    | ○     |       |                     | ○ | ○    | ○    | ○     | ○     | ○     | ○   | - |   |
| COOLPIX P340                        |               | ○ | ○    |      |              | ○ | ○    | ○    | ○    |       |                  | ○ | ○    | ○    | ○     |       |                     | ○ | ○    | ○    | ○     | ○     | ○     | ○   | - |   |
| COOLPIX P600                        |               | ○ | ○    |      |              | ○ | ○    | ○    | ○    |       |                  | ○ | ○    | ○    | ○     |       |                     | ○ | ○    | ○    | ○     | ○     | ○     | ○   | - |   |
| COOLPIX P900                        |               | ○ | ○    |      |              | ○ | ○    | ○    | ○    |       |                  | ○ | ○    | ○    | ○     |       |                     | ○ | ○    | ○    | ○     | ○     | ○     | ○   | - |   |
| COOLPIX P1000                       |               | ○ | ○    |      |              | ○ | ○    | ○    | ○    |       |                  | ○ | ○    | ○    | ○     |       |                     | ○ | ○    | ○    | ○     | ○     | ○     | ○   | - |   |
| COOLPIX S2900                       |               | ○ | ○    |      |              | ○ | ○    | ○    | ○    |       |                  | ○ | ○    | ○    | ○     |       |                     | ○ | ○    | ○    | ○     | ○     | ○     | ○   | - |   |
| COOLPIX S32                         |               | ○ | ○    |      |              | ○ | ○    | ○    | ○    |       |                  | ○ | ○    | ○    | ○     |       |                     | ○ | ○    | ○    | ○     | ○     | ○     | ○   | - |   |
| COOLPIX S33                         |               | ○ | ○    |      |              | ○ | ○    | ○    | ○    |       |                  | ○ | ○    | ○    | ○     |       |                     | ○ | ○    | ○    | ○     | ○     | ○     | ○   | - |   |
| COOLPIX S3600                       |               | ○ | ○    |      |              | ○ | ○    | ○    | ○    |       |                  | ○ | ○    | ○    | ○     |       |                     | ○ | ○    | ○    | ○     | ○     | ○     | ○   | - |   |
| COOLPIX S3700                       |               | ○ | ○    |      |              | ○ | ○    | ○    | ○    |       |                  | ○ | ○    | ○    | ○     |       |                     | ○ | ○    | ○    | ○     | ○     | ○     | ○   | - |   |
| COOLPIX S6800                       |               | ○ | ○    |      |              | ○ | ○    | ○    | ○    |       |                  | ○ | ○    | ○    | ○     |       |                     | ○ | ○    | ○    | ○     | ○     | ○     | ○   | - |   |
| COOLPIX S6900                       |               | ○ | ○    |      |              | ○ | ○    | ○    | ○    |       |                  | ○ | ○    | ○    | ○     |       |                     | ○ | ○    | ○    | ○     | ○     | ○     | ○   | - |   |
| COOLPIX S7000                       |               | ○ | ○    |      |              | ○ | ○    | ○    | ○    |       |                  | ○ | ○    | ○    | ○     |       |                     | ○ | ○    | ○    | ○     | ○     | ○     | ○   | - |   |
| COOLPIX S9700                       |               | ○ | ○    |      |              | ○ | ○    | ○    | ○    |       |                  | ○ | ○    | ○    | ○     |       |                     | ○ | ○    | ○    | ○     | ○     | ○     | ○   | - |   |
| COOLPIX S9900                       |               | ○ | ○    |      |              | ○ | ○    | ○    | ○    |       |                  | ○ | ○    | ○    | ○     |       |                     | ○ | ○    | ○    | ○     | ○     | ○     | ○   | - |   |
| COOLPIX W100                        |               | ○ | ○    |      |              | ○ | ○    | ○    | ○    |       |                  | ○ | ○    | ○    | ○     |       |                     | ○ | ○    | ○    | ○     | ○     | ○     | ○   | - |   |
| COOLPIX W300                        |               | ○ | ○    |      |              | ○ | ○    | ○    | ○    |       |                  | ○ | ○    | ○    | ○     |       |                     | ○ | ○    | ○    | ○     | ○     | ○     | ○   | - |   |
| D3300                               |               | ○ | ○    |      |              | ○ | ○    | ○    | ○    |       |                  | ○ | ○    | ○    | ○     |       |                     | ○ | ○    | ○    | ○     | ○     | ○     | ○   | - |   |
| D3300                               |               | ○ | ○    |      |              | ○ | ○    | ○    | ○    |       |                  | ○ | ○    | ○    | ○     |       |                     | ○ | ○    | ○    | ○     | ○     | ○     | ○   | - |   |
| D3500                               |               | ○ | ○    |      |              | ○ | ○    | ○    | ○    |       |                  | ○ | ○    | ○    | ○     |       |                     | ○ | ○    | ○    | ○     | ○     | ○     | ○   | - |   |
| D500                                |               | ○ | ○    |      |              | ○ | ○    | ○    | ○    |       |                  | ○ | ○    | ○    | ○     |       |                     | ○ | ○    | ○    | ○     | ○     | ○     | ○   | - |   |
| D5500                               |               | ○ | ○    |      |              | ○ | ○    | ○    | ○    |       |                  | ○ | ○    | ○    | ○     |       |                     | ○ | ○    | ○    | ○     | ○     | ○     | ○   | - |   |

